
This option comes installed on the tub. A bonding lug is provided on the metal heater body and MUST be bonded to a cold metal piping system using a copper bonding jumper, insulated, covered or bare, not smaller than 8 AWG solid per National Electric Code (NEC). The heater draws 12.5 amps and therefore should have a dedicated GFCI. The heater turns itself on with an internal pressure switch when the Hydro pump is turned on. It also turns itself off when the pump is turned off. There is a small red light on the front of the heater that indicates when the unit is on. There is no maintenance required. It is the contractor's/installer's responsibility to ensure that all electrical connections and appropriate grounding are installed in compliance with all applicable state and local code requirements.

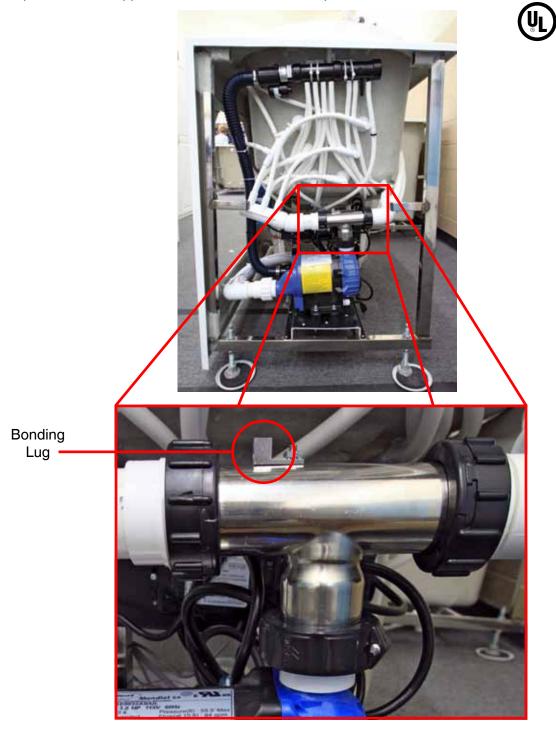

SAVE THESE INSTRUCTIONS

© 2015 - 2017 Bliss Walk-in Bathtubs. All Rights Reserved.